

V1.0

# TURTLE QUICK OPERATION GUIDE

## 1 RIGHT BUTTON

Press the RIGHT button for 3s-5s to activate video recording in the meanwhile the light on the lower right corner will flicker.

#### **2** LEFT BUTTON

Press the LEFT button for 3s-5s to stop video recording.

## 3 DOWN BUTTON

Press the DOWN button for 3s-5s to switch the resolution, 720P with Blue LED on,1080P with Red LED on, the default mode is 1080P.

#### **4** MIDDLE BUTTON

The MIDDLE button is menu button.



1	VCC_5-12V
2	GND
3	VIDEO
1	MENII

5	GND
6	RX
7	TX



MODEL	WHOOP VERSION
Image Sensor	1/2.7"CMOS Sensor
Horizontal Resolution	800TVL
Video Resolution	1080P@60fps /1080P@30fps
FPV/Recording FOV	170°
TV System	NTSC & PAL (changeable)
Audio	Support
Min.Illumination	0.01LUX
Lens	1.8mm lens

WDR	Super WDR
FLY OSD	Yes
Video Files	MP4
Electronic Shutter	PAL:1/50~100,000;NTSC:1/60~100,000
DNR	3 DNR
Video Output	CVBS
Power Input	DC 5-20V
Color	Black / White for expand case
Work Temperature	-20℃~+60℃
Weight	9g
Dimensions	DVR board: 28*29mm / Camera 14*14mm (it will be extended into 19*19mm when put on expand case)
Please use the micro SD card with high temperature resistance	Poor-quality micro SD card may cause video lagging or frame drop

# **PACKING LIST**

BabyTurtle Camera (whoop version)	x1
5D-OSD menu board	x1
FPV silicone cable (2pin plug for both sides)	x1
Internal hexagonal wrench	x1
4pin 1.25 FPV silicone cable (extend into a 2pin joint for OSD board and a 3pin joint for FPV)	x1
Screws	x1
Protective cover for micro SD card	x1
Expand case 19*19mm	x1
Warranty card	x1