

感谢您购买Radiomaster ER6GV ExpressLRS接收机，ER6GV接收机基于革命性的 ExpressLRS 系统，具有高性能、高可靠性、配置灵活、响应速度快、射程超远等特点。ER6GV 接收机具有用于滑翔机的内置Vario高度计。

注意：

1. 遥控器端推荐的ELRS LUA设置为：

- 标准舵机设置：

数据包传输速率：100Hz Full

回传比例：Std (1:8) (如果不确定则默认)


开关模式：8ch

- 高性能舵机设置：

数据包传输速率：333Hz Full

回传比例：Std (1:8)

开关模式：8ch

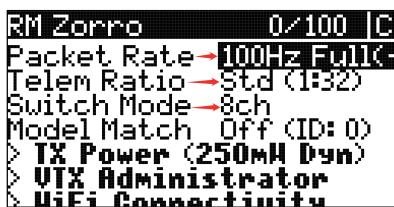

2. EXT-V (外部电压输入) 电压回传读数的最大输入电压为 35V。不要超过 35V, 否则会损坏接收机。

3. ER6GV的EXT-V (外部电压输入) 可通过PCB上的EXT-V焊盘进行连接。一根导线必须焊接到这个焊盘上，并连接到电池或电调的正极线上。如果没有发现EXT-V电源，ER6GV将默认读取接收机引脚上的电压，任何情况下只能检测一个电池或电源的电压。

4. 您的遥控器将需要校准回传电压。在遥控器的回传设置页面，找到RxBit传感器。编辑传感器设置并微调偏移量 (Offset)，直到显示的读数与模型中电池的实际电压相匹配，如果差异较大，则可能还需要调整比例 (Ratio)。

5. 接收机上的第6通道不得用作电源输入通道，可以用作舵机输出通道。来自 ESC 或接收机电池的电源只能应用于1通道至5通道。

*校准的电压与实际测量电池的总电压保持一致即可。

TELEMETRY	11 / 12	SENSOR 11	7.30
8: TRSS	-28dB	*	Type Custom
9: TQ1g	100%	*	ID 0008 1
10: TSNR	15dB	*	Source Internal
11: RxBit	7.0V	*	Unit V
12: Curr	0.0A	*	Precision 0.0
13: Capa	0mAh	*	Ratio -
14: Bat.Z	0%	*	Offset 0

6. ExpressLRS 需要 CH5 来设置遥控器中射频模块的锁定/解锁状态。建议在遥控器上给 CH5 分配给一个开关，例如油门切断开关，使用 ExpressLRS LUA 或 WiFi WebUI，您可以将不同的通道分配给接收机的 CH5 输出。

CH1: CH1
CH2: CH2
CH3: CH3
CH4: CH4
CH5: CH7
CH6: CH6

请访问<https://www.expresslrs.org/>以了解更多关于设置解锁开关的重要性。


Radiomaster ER6GV 接收机ER6GV内置vario高度计，专为需要紧凑纤薄接收机的滑翔机而设计，可实时回传飞机高度信息，最多可以驱动6个舵机，并具有内置的接收机电压回传和飞行电池回传功能，能够自动检测要使用的电压输入，ER6GV具有双天线，回传功率高达50mw。ER6GV可使用1S Lipo接收机电池稳定供电。

产品特点：

电源：DC 3.5 - 8.4V
天线类型：15cm高灵敏度天线
无线协议：预装ExpressLRS 3.3.0
输出通道：6CH PWM
回传功率：50mw
高度计：内置高精度气压传感器 (Vario)
回传电池电压检测范围：DC 3.0 - 26V
重量：5.0克
尺寸：42*13*8mm

固件选择：

设备类别：Radiomaster 2.4Ghz
设备：Radiomaster ER6GV

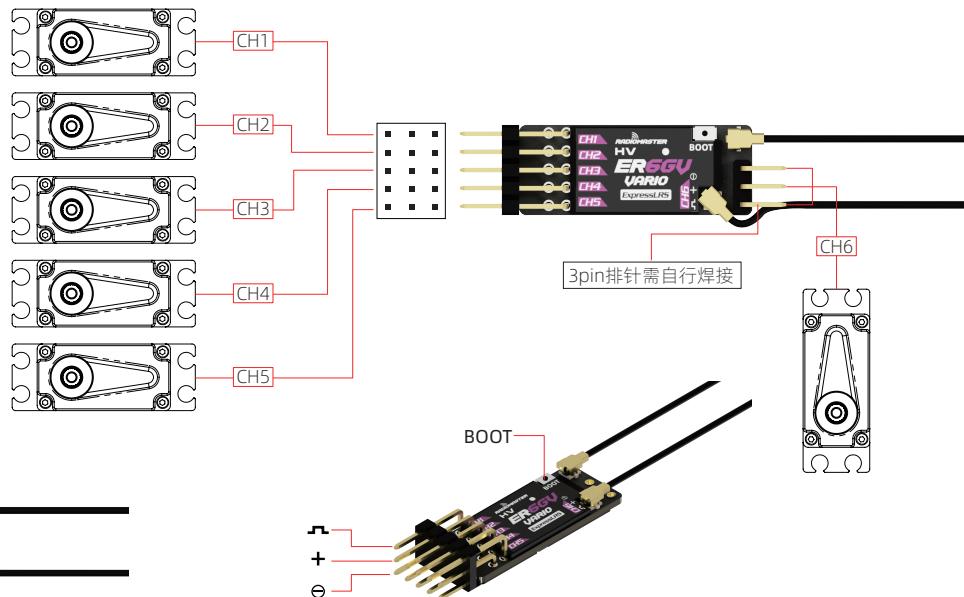

对频方法（传统方式）：

1. 当您第一次打开接收机时，接收机LED灯会连续双闪，这表明接收机处于对频模式中。如果不是这样，请按住接收机按钮10秒钟来重置接收机。
2. 打开遥控器上的ExpressLRS LUA，选择[BIND]，然后确认。
3. 对频成功指示灯常亮，表示对频成功。



对频方法（对频短语方式Binding phrase）

1. 打开ExpressLRS LUA脚本并导航到WIFI连接页面。选择启用WIFI选项，并通过手机、平板电脑或个人电脑连接到您的ExpressLRS发射机WIFI（参见下面的TX WIFI说明）。打开WebUI网页（ExpressLRS的默认网页地址为：<http://10.0.0.1/>），并输入一个独特的属于您自己的对频短语，保存并重新启动。
2. 打开接收机，等待60秒，LED迅速闪烁以指示WIFI模式。将您的手机、平板电脑或个人电脑连接到接收机WIFI（参见下面的TX WIFI说明）。打开WebUI网页（ExpressLRS的默认网页地址为：<http://10.0.0.1/>），并输入与发射机中一致的对频短语，保存并重新启动。一旦发射机和接收机有相同的对频短语时，它们将自动连接而无需对频。

注意：

要第二次对频接收机或对频到另一个无线电，请重新启动接收机 3 次（重复上电三次）。在第三次上电后，接收机LED灯将双闪表示为对频模式。如果使用3次上电方法无法成功进入对频模式，可以按住接收机按钮10秒将接收机重置为对频模式，或者使用下面的短语对频方法。

警告：使用重置按钮时，接收机中所有先前的设置都将被删除，需要重新设置。

发射机WIFI：

WIFI默认网络名称：ExprsLRS TX

WIFI默认密码：expresslrs

默认URL: <http://10.0.0.1/> (在浏览器中打开)

接收机WIFI：

WIFI默认网络名称：ExprsLRS RX

WIFI默认密码：expresslrs

默认URL: <http://10.0.0.1/> (在浏览器中打开)

Thank you for purchasing the Radiomaster ER6GV ExpressLRS receiver. The ER6GV receiver is based on the revolutionary ExpressLRS system. It offers high performance, high reliability, flexible configuration, fast response speed and ultra-long range. The ER6GV Receiver has a built in Vario for use in gliders.

Important:

1.The recommended ELRS LUA settings on the remote-control end are:

- Standard servos:

Packet Rate: 100Hz Full

Telem Ratio: Std (1:8) (default if unsure)


Switch Mode: 8ch

- Performance servos:

Packet Rate: 333Hz Full

Telem Ratio: Std (1:8)

Switch Mode: 8ch

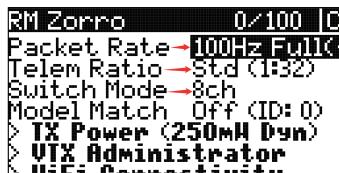

2: The maximum input voltage for the EXT-V (external voltage input) telemetry reading is 35V. Do not exceed 35V or the receiver will be damaged.

3: The EXT-V (external voltage input) of the ER6GV is accessed via the EXT-V solder pad on the PCB. A single wire must be soldered to this pad and connected to the positive wire of the battery or ESC. If no EXT-V power source is found, the ER6GV will default to reading the voltage on the receiver pins, only one voltage input can be used at the any given time.

4: Calibration of the telemetry voltage will be required on your radio. Navigate to the telemetry page on your radio and locate the RxBt sensor. Edit the sensor settings and adjust the offset until the displayed reading matches the actual voltage of the battery in the model. If there is a large difference, adjustment of the ratio may also be required.

5: Channel 6 on the receiver must not be used as the power input channel and may not be used as a servo output channel. Power from an ESC or Receiver battery must only be applied on Channels 1 to 5.

*For best results, calibrate the voltage of your radio using a fully charged battery of the correct cell count intended for use in the model.

TELEMETRY		11/12	SENSOR11	7.30
8: TRSS	-28dB	*	Type	Custom
9: TQI%	100%	*	ID	0008 1
10: TSNR	15dB	*	Source	Internal
11: RxBt	7.0V	*	Unit	V
12: Curr	0.0A	*	Precision	0.0
13: Capa	0mAh	*	Ratio	-
14: Bat%	0%	*	Offset	0.0

6: ExpressLRS Arming requirements and the use of Channel 5: CH5 is required by ExpressLRS to set the Arm state of the RF module in your radio. It is recommended to assign CH5 to a switch such as your throttle cut switch as this will provide benefits such as dynamic. Using the ExpressLRS LUA or the WiFi WebUI, you can assign different channels to the CH5 output of your receiver. See example to the right:

Please visit <https://www.expresslrs.org/> to learn more on the importance of setting up arming.

CH1: CH1
CH2: CH2
CH3: CH3
CH4: CH4
CH5: CH7
CH6: CH6

The Radiomaster ER6GV receiver has been specially designed for glider pilots who require a compact and slim receiver with a built in vario function. It can drive up to 6 servos and has built-in receiver voltage telemetry and flight battery telemetry with the ability to automatically detect which voltage input to use. The ER6GV features a dual-antenna with telemetry power up to 50mw. The ER6GV can work stably with a 1S Lipo receiver battery.

Product Features:

Power supply: DC 3.5 - 8.4V

Antenna type: 15cm high sensitivity antenna

Wireless protocol: ExpressLRS 3.3.0 pre-installed

Output channel: 6CH PWM

Telemetry power: maximum 50mw (LUA Adjustable)

Built-in high-precision air pressure sensor (Vario)

Battery voltage detection range: DC 3.0 - 26V


Weight: 5.0 grams

Dimensions: 42*13*8mm

Firmware:

Device Category: Radiomaster 2.4Ghz

Device: RadioMaster ER6G/ER6GV 2400 PWM RX

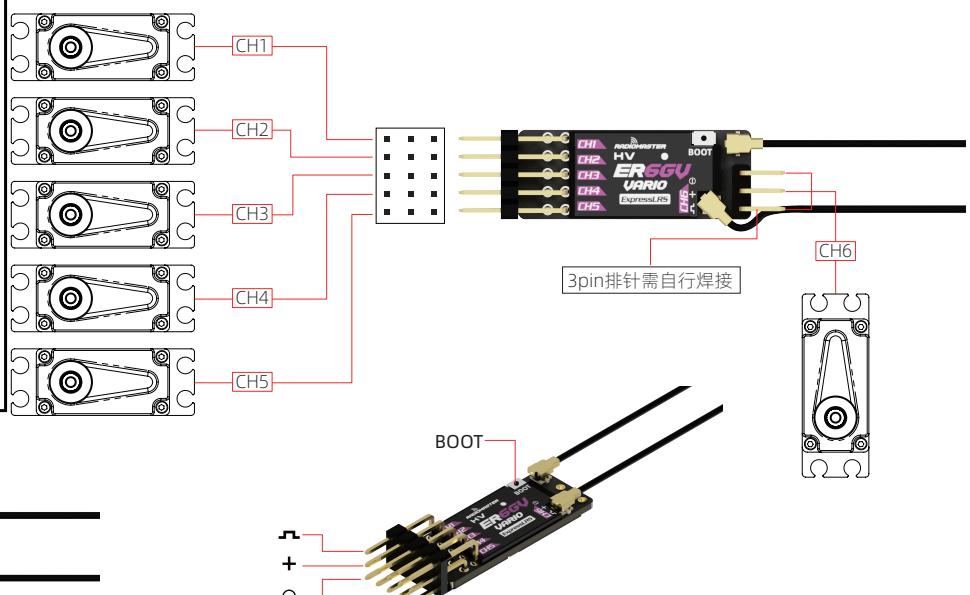

Binding method (Traditional):

1. The first time you power on your receiver, the LED will double blink. This indicates that the receiver is in bind mode. If this is not the case, hold down the boot button for 10 seconds to reset the receiver.
2. Open the ExpressLRS LUA on your remote controller and select [BIND], then confirm.
3. A successful bind is indicated by the light being a steady on, indicating that frequency binding was successful.



Binding method (Passphrase):

1. Open the ExpressLRS LUA and navigate to the Wifi Connectivity page. Select the Enable WiFi option and connect to your radios wifi with a mobile phone, tablet or PC (See TX WiFi notes below). Open the WebUI (Express LRS web page on <http://10.0.0.1>) and choose a unique bind phrase. Note Bind phrases are not secret and can be read. Save and Reboot.

2. Power up the receiver and wait 60 seconds for the LED to blink rapidly to indicate WiFi mode. Connect your phone, tablet or PC to the receivers WiFi (See TX WiFi notes below). Open the WebUI (Express LRS web page on <http://10.0.0.1>) and enter the matching bind phrase previously entered on your radio. Note Bind phrases are not secret and can be read. Save and Reboot. Once a radio and a receiver have the same bind phrase set they will automatically bind.

Note: To bind the receiver a second time or to another radio, power cycle the receiver 3 times. On the third power cycle, the LED will double blink indicating bind mode. If you cannot successfully enter bind mode with the 3 power cycle method, you can hold down the boot button for 10 seconds to reset the receiver to bind mode or use the passphrase method below.

WARNING: All previous settings in the receiver will be erased and need to be set again when using the reset button.

TX WiFi notes: WiFi default network name: ExpressLRS TX WiFi default password: expresslrs Default URL: http://10.0.0.1 (Open in browser)	RX WiFi notes: WiFi default network name: ExpressLRS RX WiFi default password: expresslrs Default URL: http://10.0.0.1 (Open in browser)
---	---