

感谢您购买 Radiomaster ER6G ExpressLRS 接收机，ER6G 接收机基于革命性的 ExpressLRS 系统，具有高性能、高可靠性、配置灵活、响应速度快、超远航程等特点。ER6G 接收机具有与 ER6GV 相同的功能，只是没有内置 Vario 高度计，适用于禁止使用 Vario 高度计的比赛，或者仅适用于不需要 vario 高度计功能的用户。

2. EXT-V (外部电压输入) 电压回传读数的最大输入电压为 35V。不要超过 35V，否则会损坏接收机。

3. ER6G 的 EXT-V (外部电压输入) 可通过 PCB 上的 EXT-V 焊盘进行连接。一根导线必须焊接到这个焊盘上，并连接到电池或电调的正极线上。如果没有发现 EXT-V 电源，ER6G 将默认读取接收机引脚上的电压，任何情况下只能检测一个电池或电源的电压。

4. 请确保电调 BEC 的供电电流与所用舵机的功耗要求相匹配。如果使用高压大扭矩舵机，建议使用 2S 7.4V 电池直接供电或合适的大电流 UBEC。

5. 您的遥控器将需要校准回传电压。在遥控器的回传设置页面，找到 Rx/Bt 传感器。编辑传感器设置并微调偏移量 (Offset)，直到显示的读数与模型中电池的实际电压相匹配，如果差异较大，则可能还需要调整比例 (Ratio)。

*校准的电压与实际测量电池的总电压保持一致即可。

TELEMETRY	11/12	SENSOR 11	7.30
8: TRSS -28dB	*	Type	Custom
9: TQ1y 100%	*	ID	0008 1
10: TSNR 15dB	*	Source	Internal
11: Rx/Bt 7.0V	*	Unit	0
12: Curr 0.0A	*	Precision	0.0
13: Capa 0mAh	*	Ratio	-
RCBat% 0%	*	Offset	0.0

6. 接收机上的第6通道不得用作电源输入通道，可以用作舵机输出通道。来自 ESC 或接收机电池的电源只能应用于1通道至5通道。

7. ExpressLRS 需要 CH5 来设置遥控器中射频模块的锁定/解锁状态。建议在遥控器上给 CH5 分配给一个开关，例如油门切断开关，使用 ExpressLRS LUA 或 Wifi WebUI，您可以将不同的通道分配给接收机的 CH5 输出。

请访问 <https://www.expresslrs.org/> 以了解更多关于设置解锁开关的重要性。

- CH1: CH1
- CH2: CH2
- CH3: CH3
- CH4: CH4
- CH5: CH7
- CH6: CH6

注意:

1. 遥控器端推荐的 ELRS LUA 设置为:

- 标准舵机设置:

数据包传输速率:	100Hz Full
回传比例:	Std (1:32) (如果不确定则默认)
开关模式:	8ch

- 高性能舵机设置:

数据包传输速率:	333Hz Full
回传比例:	Std (1:128)
开关模式:	8ch


Radiomaster ER6G 接收机专为需要小巧纤薄接收机的滑翔机而设计。它最多可以驱动6个舵机，并具有内置的接收机电压回传和飞机电池电压回传功能，能够自动检测要使用的电压输入。ER6G 具有双天线，回传功率高达50mw，ER6G 接收机没有内置高度计，用于禁止使用 vario 高度计的比赛，ER6G 可使用 1S Lipo 接收机电池供电。

产品特点:

- 电源: DC 3.5 - 8.4V
- 天线类型: 15cm 高灵敏度天线
- 无线协议: 预装 ExpressLRS 3.3.0
- 输出通道: 6CH PWM
- 回传功率: 50mw
- 回传电压检测范围: DC 3.0 - 26V
- 重量: 5.0克
- 尺寸: 42*13*8毫米

固件选择:

- 设备类别: Radiomaster 2.4Ghz
- 设备: Radiomaster ER6G

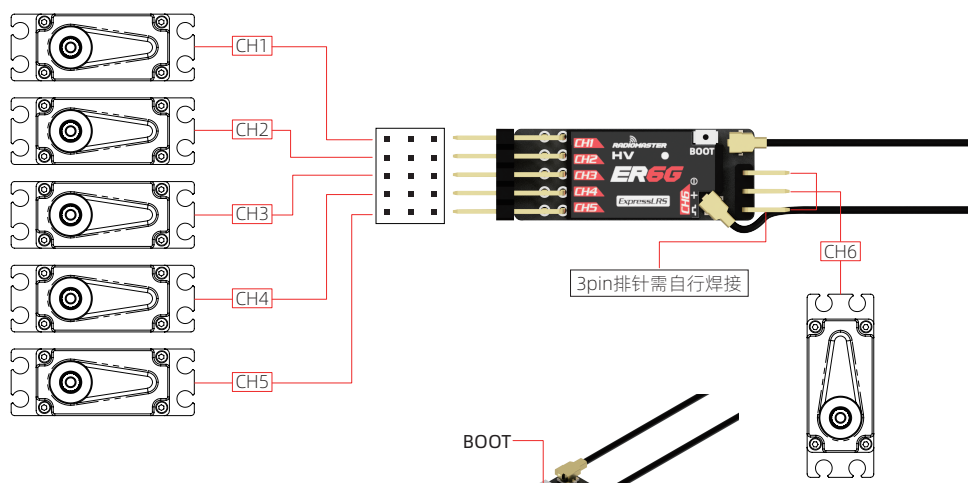

对频方法 (传统方式):

1. 当您第一次打开接收机时，接收机 LED 灯会连续双闪。这表明接收机处于对频模式中。如果不是这样，请按住接收机按钮 10 秒钟来重置接收机。
2. 打开遥控器上的 ExpressLRS LUA，选择 [BIND]，然后确认。
3. 对频成功 指示灯常亮，表示对频成功。



注意: 要第二次对频接收机或对频到另一个无线电，请重新启动接收机 3 次 (重复上电三次)。在第三次上电后，接收机 LED 灯将双闪表示对频模式。如果使用 3 次上电方法无法成功进入对频模式，可以按住接收机按钮 10 秒将接收机重置为对频模式，或者使用下面的短语对频方法。

警告: 使用重置按钮时，接收机中所有先前的设置都将被删除，需要重新设置。

对频方法 (对频短语方式 Binding phrase)

1. 打开 ExpressLRS LUA 脚本并导航到 WIFI 连接页面。选择启用 WIFI 选项，并通过手机、平板电脑或个人电脑连接到您的 ExpressLRS 发射机 WIFI (参见下面的 TX WIFI 说明)。打开 WebUI 网页 (ExpressLRS 的默认网页地址为: <http://10.0.0.1/>)，并输入一个独特的属于您自己的对频短语，保存并重新启动。
2. 打开接收机，等待 60 秒，LED 迅速闪烁以指示 WIFI 模式。将您的手机、平板电脑或个人电脑连接到接收机 WIFI (参见下面的 TX WIFI 说明)。打开 WebUI 网页 (ExpressLRS 的默认网页地址为: <http://10.0.0.1/>)，并输入与发射机中一致的对频短语，保存并重新启动。一旦发射机和接收机有相同的对频短语时，它们将自动连接而无需对频。

发射机 WIFI: WIFI 默认网络名称: ExprsLRS TX WIFI 默认密码: expresslrs 默认 URL: http://10.0.0.1/ (在浏览器中打开)	接收机 WIFI: WIFI 默认网络名称: ExprsLRS RX WIFI 默认密码: expresslrs 默认 URL: http://10.0.0.1/ (在浏览器中打开)
---	---

Thank you for purchasing the Radiomaster ER6G ExpressLRS receiver. The ER6G receiver is based on the revolutionary ExpressLRS system. It offers high performance, high reliability, flexible configuration, fast response speed and ultra-long range. The ER6G Receiver has the same functionality as the ER6GV only without a built in Vario for competitions that prohibit the use of a Vario or simply for users who do not need a vario on their receiver.

⚠ Important:

1. The recommended ELRS LUA settings on the remote-control end are:

- **Standard servos:**

Packet Rate:	100Hz Full
Telem Ratio:	Std (1:32) (default if unsure)
Switch Mode:	8ch

- **Performance servos:**

Packet Rate:	333Hz Full
Telem Ratio:	Std (1:128)
Switch Mode:	8ch

- The maximum input voltage for the EXT-V (external voltage input) telemetry reading is 35V. Do not exceed 35V or the receiver will be damaged.
- The EXT-V (external voltage input) of the ER6G is accessed via the EXT-V solder pad on the PCB. A single wire must be soldered to this pad and connected to the positive wire of the battery or ESC. If no EXT-V power source is found, the ER6G will default to reading the voltage on the receiver pins, only one voltage input can be used at the any given time.
- Please ensure that the power supply current of the ESC BEC matches the power consumption requirements of the servo used. If using high-voltage and high-torque servos, it is recommended to use a 2S 7.4V battery for direct power supply or a suitable high-current UBEC.
- Calibration of the telemetry voltage will be required on your radio. Navigate to the telemetry page on your radio and locate the RxBt sensor. Edit the sensor settings and adjust the offset until the displayed reading matches the actual voltage of the battery in the model. If there is a large difference, adjustment of the ratio may also be required.

*For best results, calibrate the voltage of your radio using a fully charged battery of the correct cell count intended for use in the model.

TELEMETRY		11/12	SENSOR 11		7.30V
8: TRSS	-29dB	*	Type	Custom	
9: TQ1y	100%	*	ID	0008	1
10: TSNR	15dB	*	Source	Internal	
11: RxBt	7.0V	*	Unit	U	
12: Curr	0.0A	*	Precision	0.0	
13: Capa	0mAh	*	Ratio	-	
14: Bat%	0%	*	Offset	0%	

6: Channel 6 on the receiver must not be used as the power input channel and may not be used as a servo output channel. Power from an ESC or Receiver battery must only be applied on Channels 1 to 5.

7: ExpressLRS Arming requirements and the use of Channel 5: CH5 is required by ExpressLRS to set the Arm state of the RF module in your radio. It is recommended to assign CH5 to a switch such as your throttle cut switch as this will provide benefits such as dynamic power. Using the ExpressLRS LUA or the Wifi WebUI, you can assign different channels to the CH5 output of your receiver. See example to the right:

Please visit <https://www.expresslrs.org/> to learn more on the importance of setting up arming.

- CH1: CH1
- CH2: CH2
- CH3: CH3
- CH4: CH4
- CH5: CH7
- CH6: CH6




The Radiomaster ER6G receiver has been specially designed for glider pilots who require a compact and slim receiver. It can drive up to 6 servos and has built-in receiver voltage telemetry and flight battery telemetry with the ability to automatically detect which voltage input to use. The ER6G features a dual-antenna with telemetry power up to 50mw. The ER6G receiver does not have a built-in altimeter for competitions that prohibit the use of vario. The ER6G can be used with a 1S Lipo receiver battery.

Product Features:

- Power supply: DC 3.5 - 8.4V
- Antenna type: 15cm high sensitivity antenna
- Wireless protocol: ExpressLRS 3.3.0 pre-installed
- Output channel: 6CH PWM
- Telemetry power: maximum 50mw (LUA Adjustable)
- Battery voltage detection range: DC 3.0 - 26V
- Weight: 5.0 grams
- Dimensions: 42*13*8mm

Firmware:

- Device Category: Radiomaster 2.4Ghz
- Device: Radiomaster ER6G

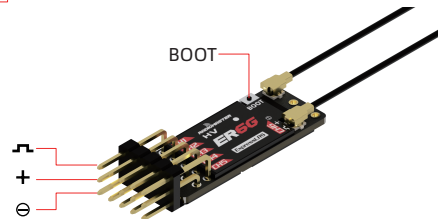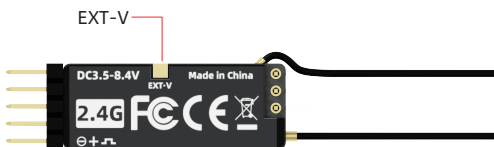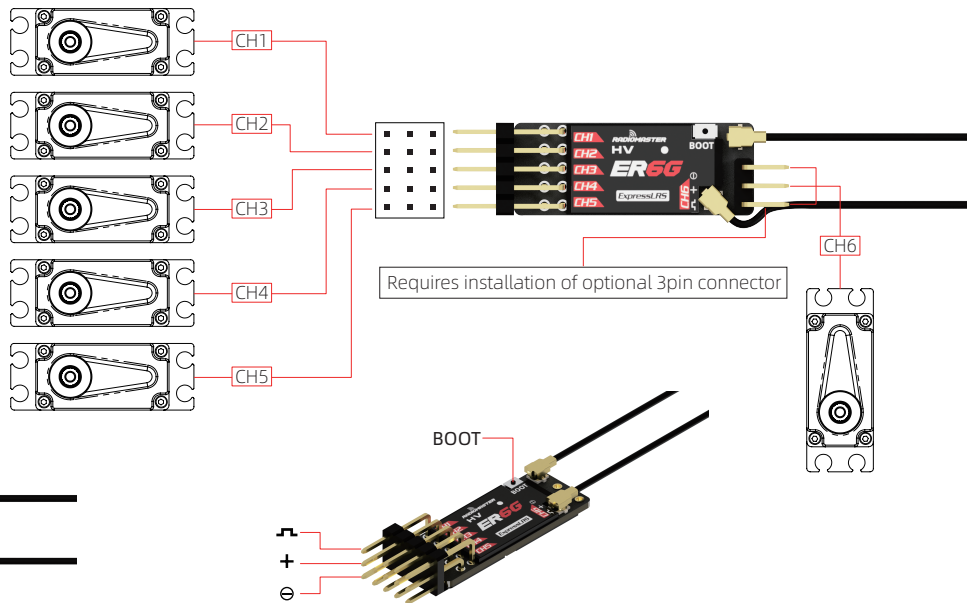

Binding method (Traditional):

- The first time you power on your receiver, the LED will double blink. This indicates that the receiver is in bind mode. If this is not the case, hold down the boot button for 10 seconds to reset the receiver.
- Open the ExpressLRS LUA on your remote controller and select [BIND], then confirm.
- A successful bind is indicated by the light being a steady on, indicating that frequency binding was successful.



Binding method (Passphrase):

- Open the ExpressLRS LUA and navigate to the Wifi Connectivity page. Select the Enable Wifi option and connect to your radios wifi with a mobile phone, tablet or PC (See TX Wifi notes below). Open the WebUI (Express LRS web page on <http://10.0.0.1/>) and choose a unique bind phrase. Note Bind phrases are not secret and can be read. Save and Reboot.
- Power up the receiver and wait 60 seconds for the LED to blink rapidly to indicate Wifi mode. Connect your phone, tablet or PC to the receivers Wifi (See TX Wifi notes below). Open the WebUI (Express LRS web page on <http://10.0.0.1/>) and enter the matching bind phrase previously entered on your radio. Note Bind phrases are not secret and can be read. Save and Reboot. Once a radio and a receiver have the same bind phrase set they will automatically bind.

⚠ Note: To bind the receiver a second time or to another radio, power cycle the receiver 3 times. On the third power cycle, the LED will double blink indicating bind mode. If you cannot successfully enter bind mode with the 3 power cycle method, you can hold down the boot button for 10 seconds to reset the receiver to bind mode or use the passphrase method below.

WARNING: All previous settings in the receiver will be erased and need to be set again when using the reset button.

TX Wifi notes:	RX Wifi notes:
WiFi default network name: ExpressLRS TX	WiFi default network name: ExpressLRS RX
WiFi default password: expresslrs	WiFi default password: expresslrs
Default URL: http://10.0.0.1/ (Open in browser)	Default URL: http://10.0.0.1/ (Open in browser)