

SPECIFICATIONS

- Item: XR2 Nano 2.4GHz ExpressLRS Receiver
- Type: ISM2.4
- MCU: ESP32C3
- RF Chip: Semtech LR1121
- Antenna: Integrated 2.4GHz Tower Antenna
- Frequency Range: 2.400 - 2.479GHz
- Telemetry Power: 10mW
- Maximum Packet rate: DK500Hz
- Minimum Packet refresh rate: 50Hz
- Working voltage: 5V
- Weight: 0.8g
- Dimension: 16mm * 12mm * 6mm
- Firmware Version: ExpressLRS v3.5.1 pre-installed
- Bus interface 1: CRSF
- Bus interface 2: UART

INCLUDES

- 1 * XR2 Nano 2.4GHz ExpressLRS Receiver
- 1 * CRSF Wire
- 3 * Heat-Shrinkable Tube
- 1 * Manual Card

DEFAULT FIRMWARE

RadioMaster XR2 2.4 RX

For more information, please visit the ELRS website:
<https://www.expresslrs.org/2.0/>

CONFIGURATION

Identifier	Configuration/MSP	Serial RX
USB VCP	<input type="checkbox"/> 115200 ▼	<input type="checkbox"/>
UART1	<input type="checkbox"/> 115200 ▼	<input type="checkbox"/>
UART2	<input type="checkbox"/> 115200 ▼	<input checked="" type="checkbox"/>

Open **Betaflight** Configurator, go to **Ports** tab and enable the corresponding UART as a Serial RX (e.g. UART2 as shown above) **Save** and **Restart**.




On the **Configuration** tab, click on **Serial-based receiver** on the **Receiver** panel, and select **CRSF**.

TRADITIONAL BINDING

Binding Phrase field must be uncommented in **Device options** on the RX.

1. Power **OFF** your transmitter/radio.
2. Plug in and unplug your receiver **3 times**.
3. Make sure the LED is doing a quick **double blink**, which indicates the receiver is in bind mode.
4. Power **ON** your transmitter/radio and use the **[BIND]** button on the ExpressLRS Lua script, which sends out a binding pulse.
5. If the receiver has a **solid light**, it's bound!

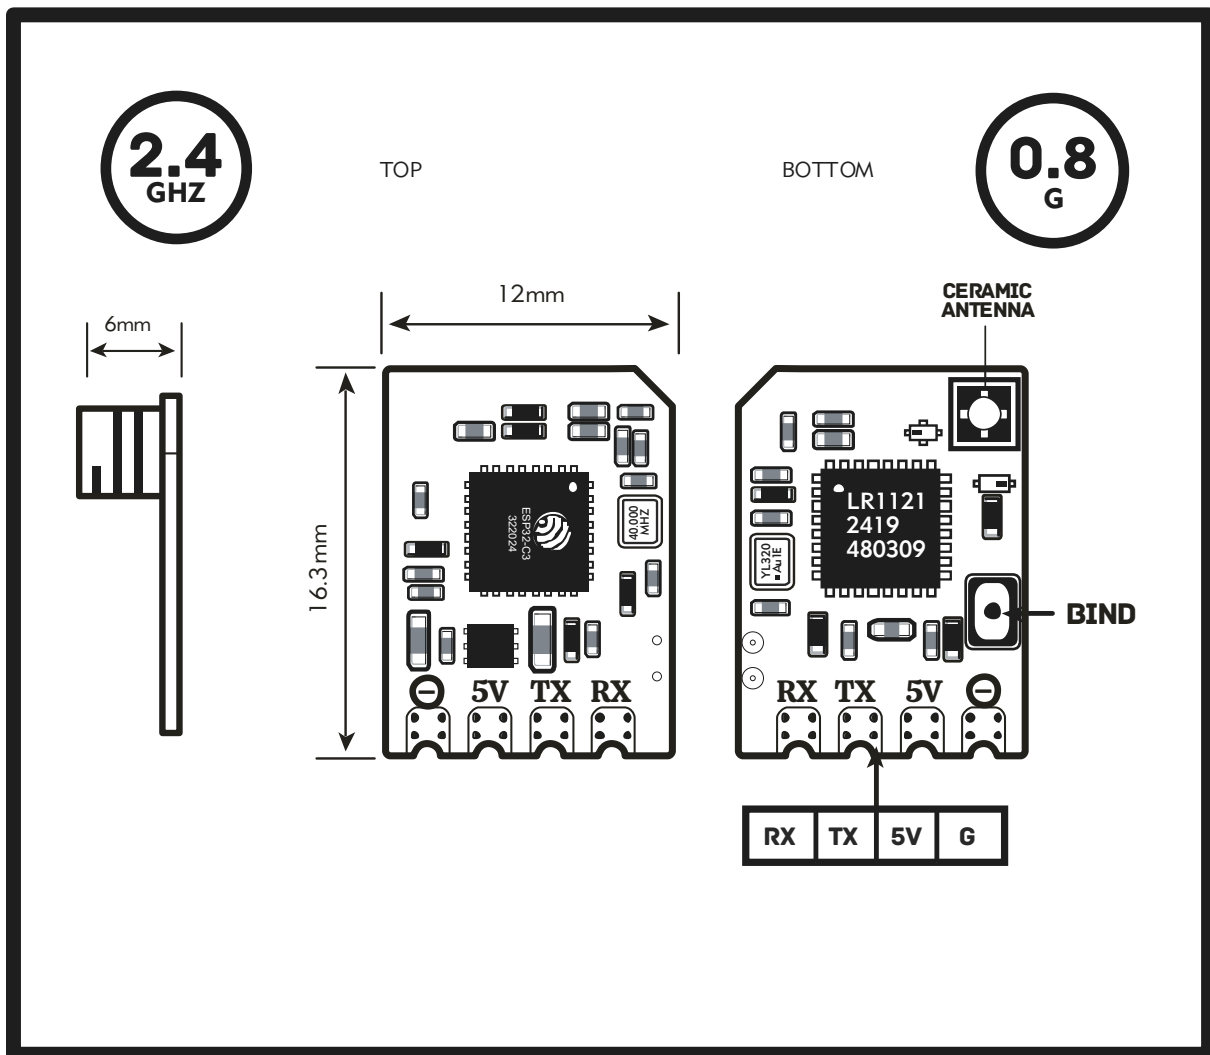

规格参数

- 类型: ISM_2.4
- MCU: ESP32C3
- 射频芯片: Semtech LR1121
- 天线: 集成 2.4GHz 塔式天线
- 频率范围: 2.4GHz
- 射频功率: 10mW
- 最大数据速率: DK500Hz
- 最小数据包刷新率: 50Hz
- 工作电压: 5V
- 重量: 0.8g
- 尺寸: 16mm * 12mm * 6mm
- 固件版本: ExpressLRS v3.5.1 已预装
- 总线接口 1: CRSF
- 总线接口 2: UART

包装清单

- 1 * XR2 Nano ExpressLRS 双频接收机
- 1 * CRSF 线材
- 3 * 热缩管
- 1 * 服务卡

固件下载

RadioMaster XR2 2.4 RX

For more information, please visit the ELRS website:

<https://www.expresslrs.org/2.0/>

设置

Identifier	Configuration/MSP	Serial RX
USB VCP	<input type="checkbox"/> 115200	<input type="checkbox"/>
UART1	<input type="checkbox"/> 115200	<input type="checkbox"/>
UART2	<input type="checkbox"/> 115200	<input checked="" type="checkbox"/>

打开Betaflight Configuration, 转到Ports端口选项卡并启用相应的UART作为Serial RX (例如, 如上所示的UART2) 保存并重新启动。



在Configuration选项卡上, 单击Receiver面板上的Serial-based receiver, 并选择CRSF。

对频方法

- 1: 关闭遥控器
- 2: 重复给接收机上电三次, 接收机灯双闪, 表明接收机处于对频模式
- 3: 开启遥控器, 进入ExpressLRS的LUA操作界面, 选择到【BIND】按键确认
- 4: 接收机灯常亮表明对频成功